

Set Home



Once you have moved the lens assembly by hand to a temporary Home Position, pressing the Set Home key will set this new position as your new temporary Home Position. This temporary home now becomes your new upper left corner.

The process of setting a temporary Home Position involves the following steps:

1. Press **X/Y Off**.
2. Press **Go** to disable X and Y axis (press **Pause** to cancel and send the carriage back to its park position.)

- 54 -

SECTION 6: MINI/HELIX CONTROL PANEL

Button Functions

3. Move the lens assembly by hand to your desired location (remember to turn the Red Dot Pointer on as a visual locator aid).
4. Press **Set Home** to establish your new Home Position.



After you have set home, pressing the **Reset** key will move the carriage to its park position **approximately 1/2 inch (12 mm) to the front of where you set home.**

5. **Resetting Home Position:** Once you are finished with your temporary Home Position and want to restore the carriage to the upper left corner of the machine, press the **Maint** key. Press the **down arrow** to see **1. Restore Home**. Press the **Go** key and the Home Position will be restored to its normal upper left corner park position.